


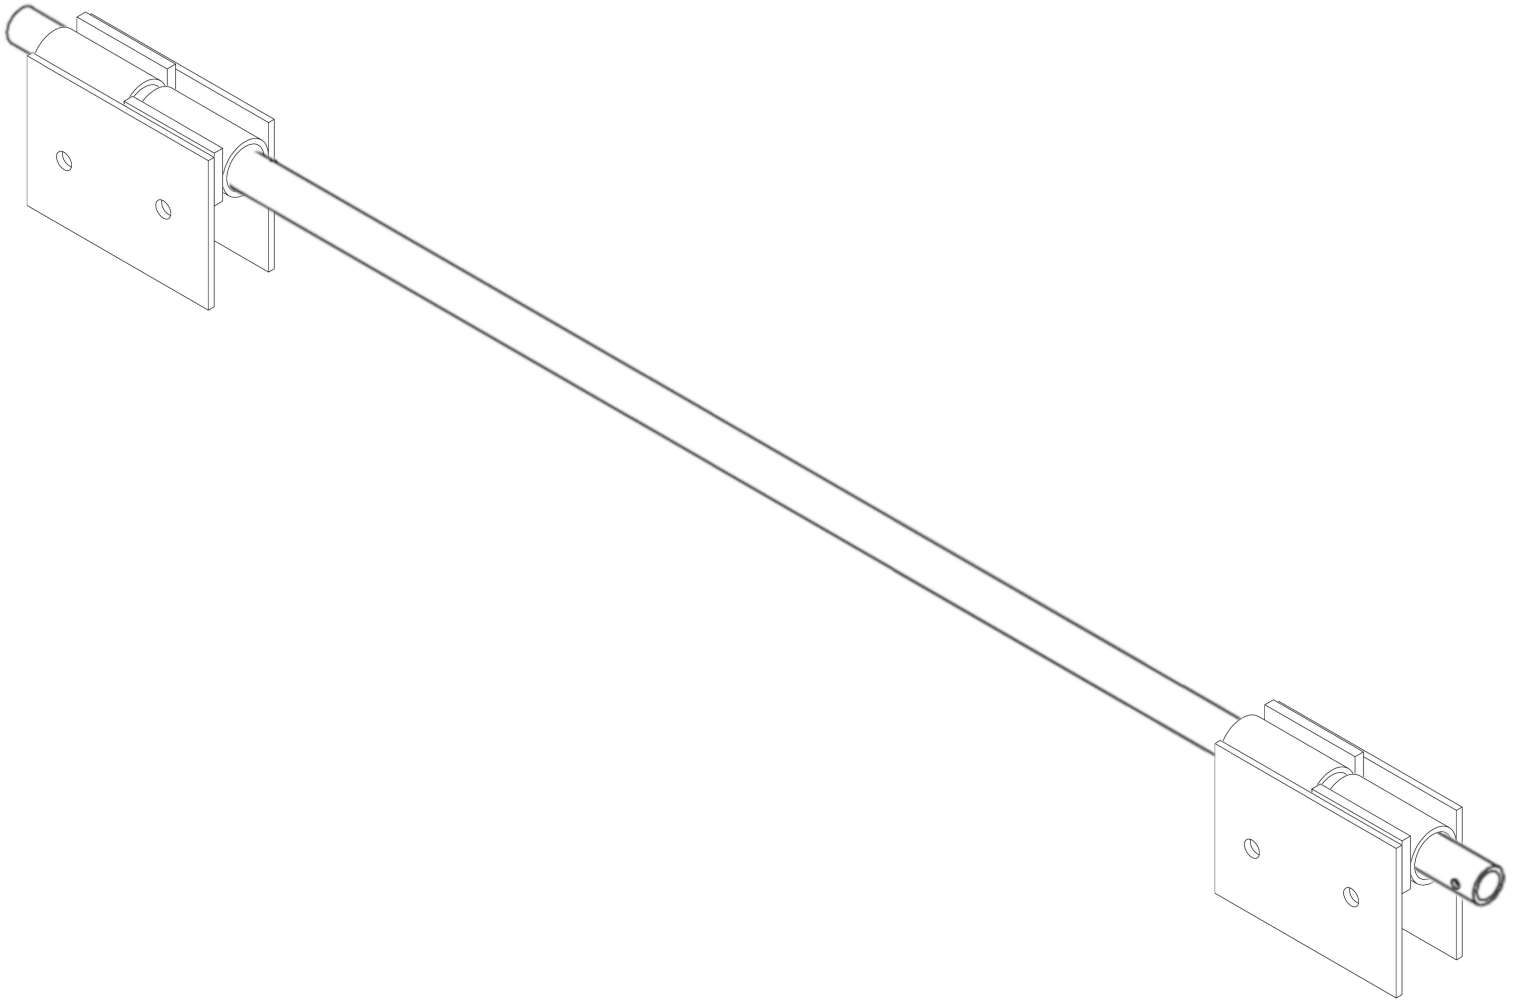

PN10847


Low-Pro Hinge

Installation Instructions



Tools Required:

M10, M14 (9/16") and M15 (5/8") Wrenches, locking pliers or adjustable wrench and #2 Phillips Screw Driver.

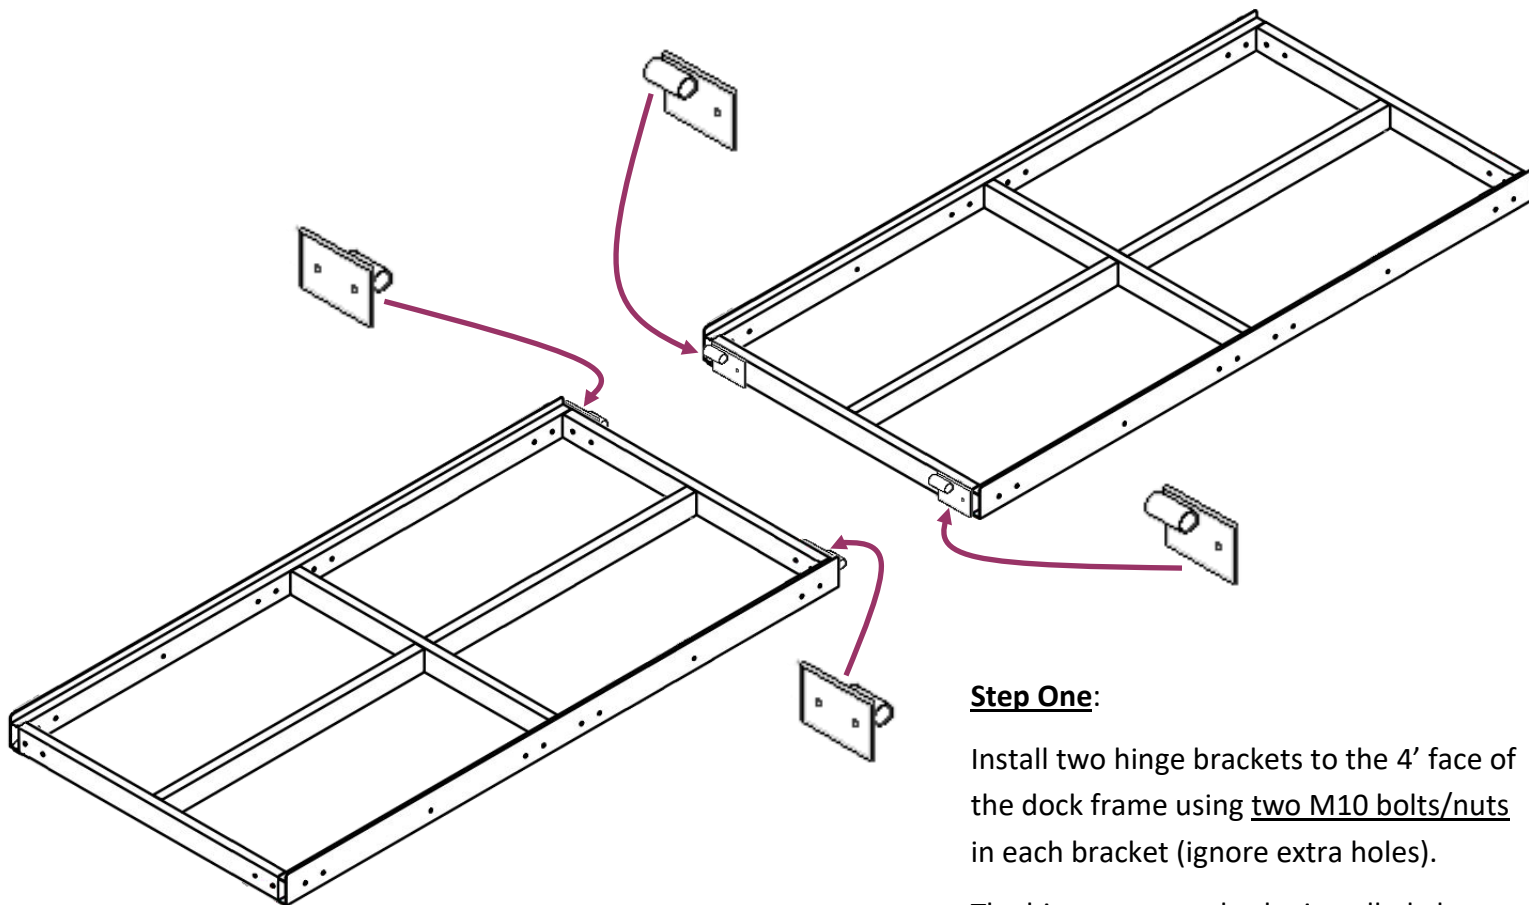

Step One:

Install two hinge brackets to the 4' face of the dock frame using two M10 bolts/nuts in each bracket (ignore extra holes).

The hinge set can also be installed along the 8' side of the frame for perpendicular connections

Step Two:

Bring the frames together and align the hinge brackets.

Insert the hinge pipe through the sleeves on the hinge plates.

Secure in place by inserting the M6 bolt/nylock nut through the pre-drilled holes in the hinge pipe.

