

Patriot Docks™ Aluminum Panel Assembly Instructions (PN 10957 and 10967)


Included Hardware:

- (8) 47-1/2" x 5-1/2" deck board
- (2) 1" x 1" aluminum angle stringers (44-7/8")

Required Tools:

- Standard Philips Head Screw Driver
- Soft Mallet

Lay each individual deck board good side down with channel profile facing up on an even work surface.

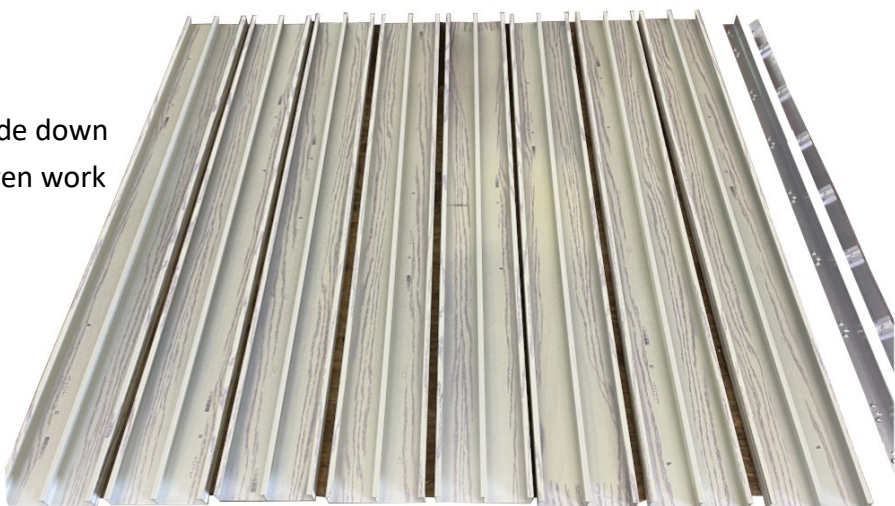

With the 1" x 1" aluminum angle stringer facing away from you, slide the stringer onto the board channel capturing each fastener on the stringer. Work the stringer up towards the center of the panel so the stringer is positioned 4" from the outside of the aluminum panel. **Use a straight edge to ensure each board is plum as the stringer is positioned on the boards.** Once the stringer is in position, use a standard Philips head screwdriver to tighten each pan-head set screw.

