




PN10845

Truss Hinge


Installation Instructions

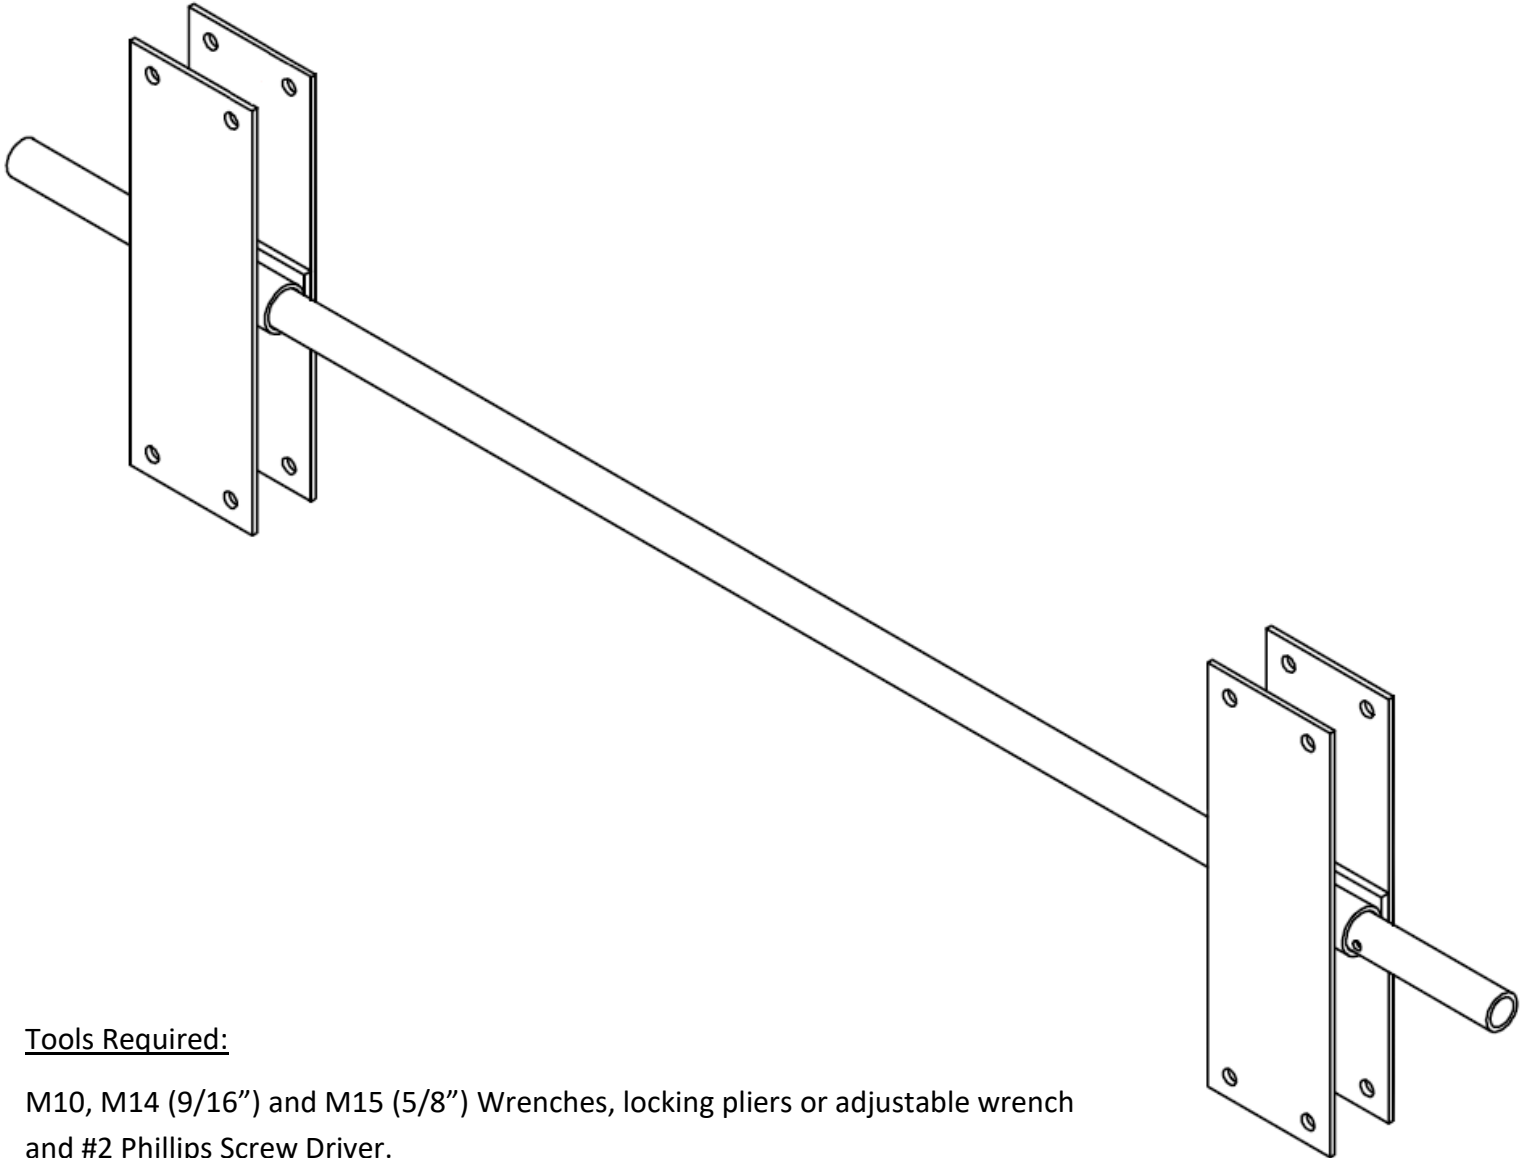

Tools Required:

M10, M14 (9/16") and M15 (5/8") Wrenches, locking pliers or adjustable wrench and #2 Phillips Screw Driver.

**\*NOTE\*** Each Patriot frame being joined together by the hinge must have a PN10803 End Rail installed on each side of the joint.

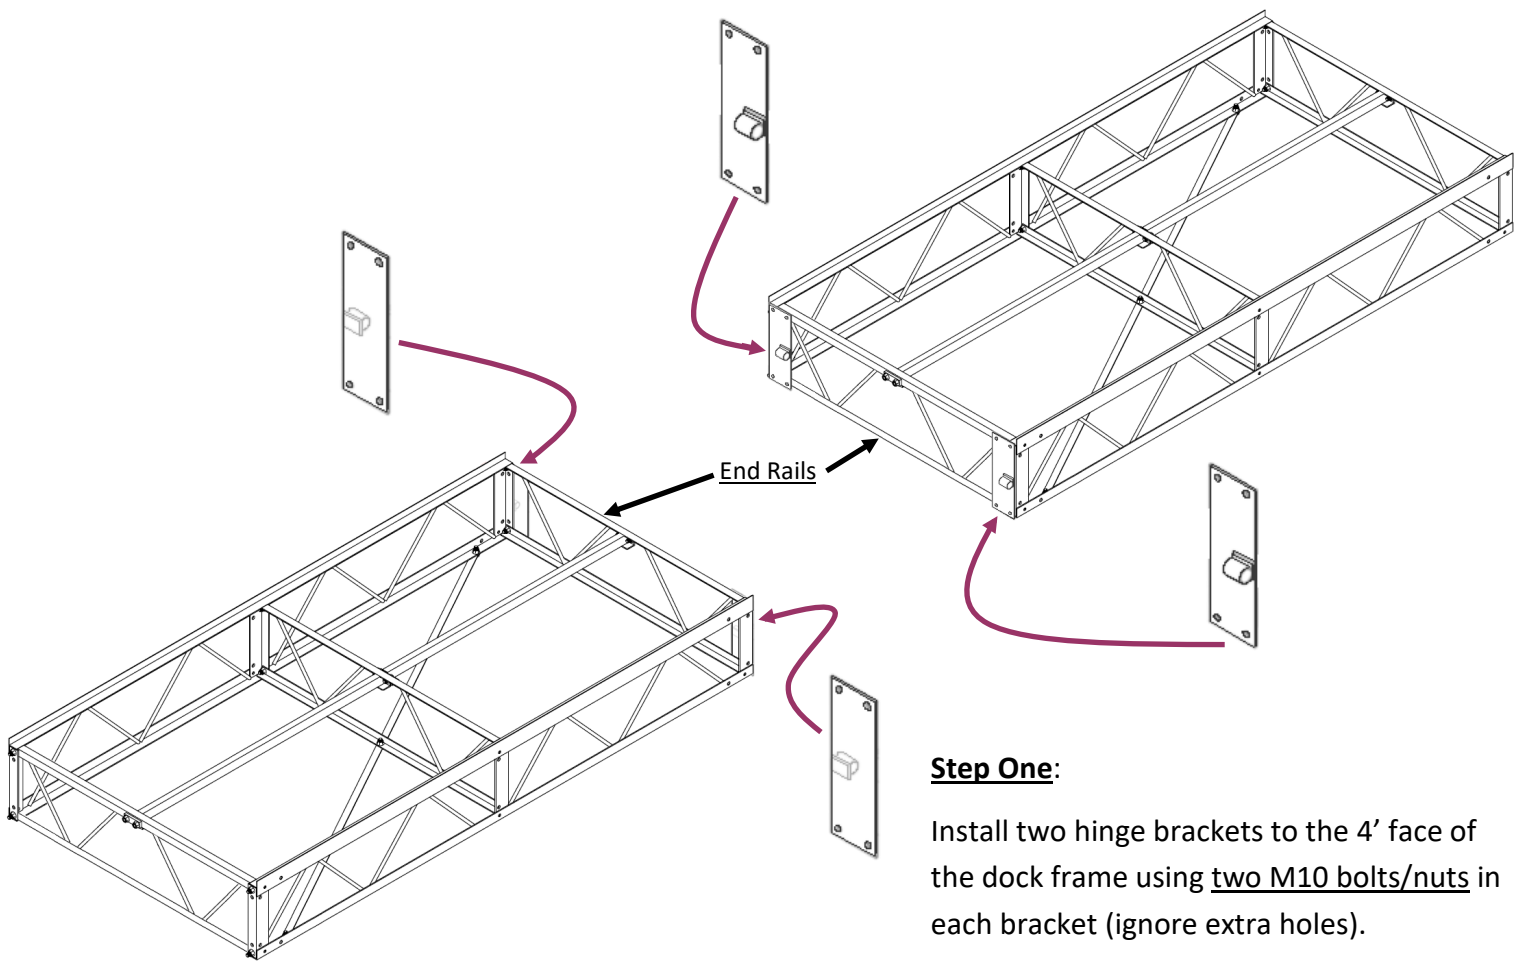

**Step Two:**

Bring the frames together and align the hinge brackets.

Insert the hinge pipe through the sleeves on the hinge plates.

Secure in place by inserting the M6 bolt/nylock nut through the pre-drilled holes in the hinge pipe.

