

# 4'x4' Poly Panel

Assembly Instructions

- PN 10851 - Gray 4x4
- PN 10861 - Tan 4x4
- PN 10850 - Gray 1x4
- PN 10860 - Tan 1x4

## RECOMMENDED TOOLS




Cordless Drill




Screwdriver  
(Phillips)



Work Gloves

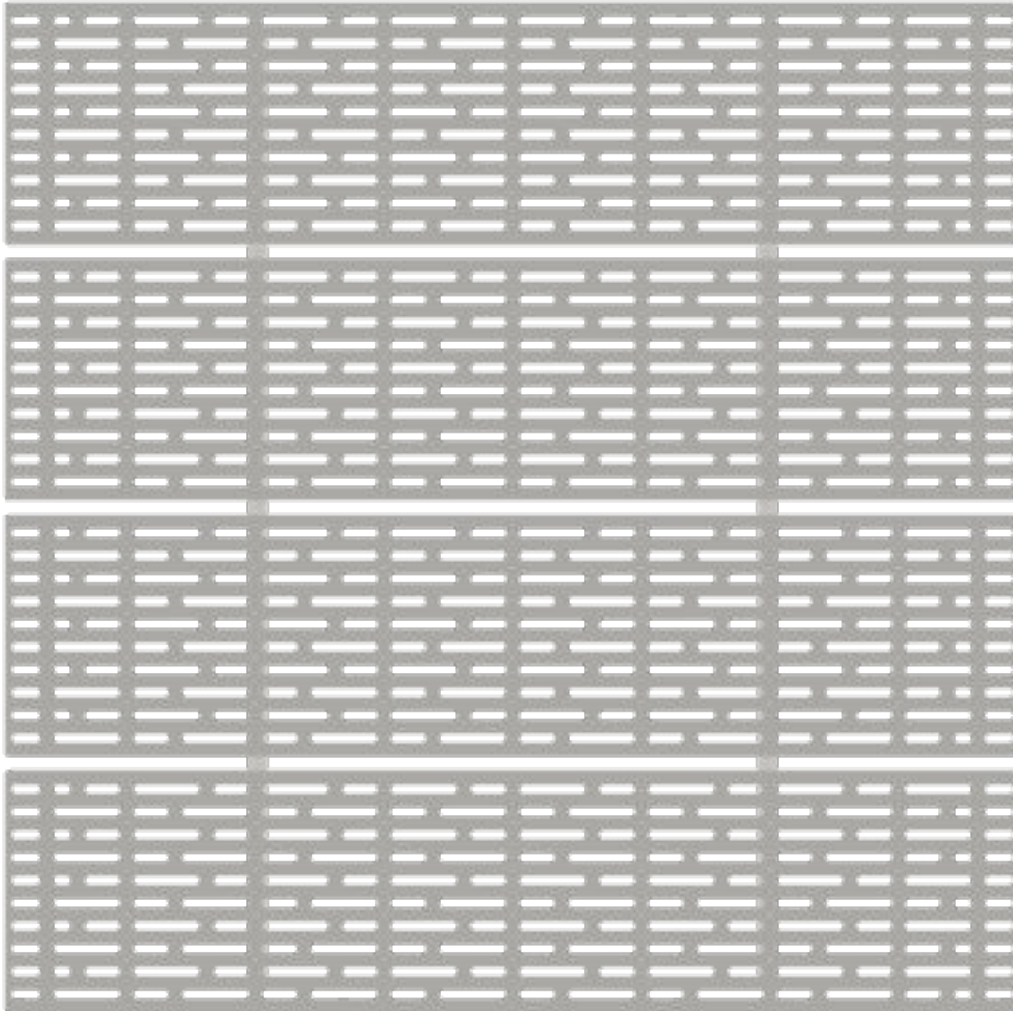

	Part Number	Description	Qty.
A	10850/60	Gray/Tan 1'x4' Poly Board	4
B	10851-2	Stringer Angle	2
C	Hardware	M5x25 Pan Head Screws	16

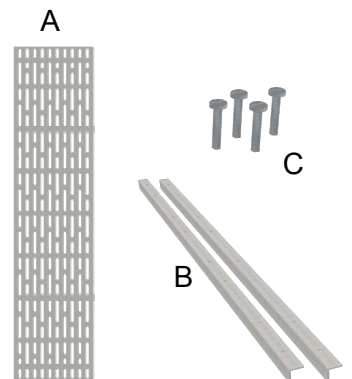

Scan for Online Help:  
FAQ, Online support



(651) 674-2450

info@patriotdocks.com

# 4'x4' Poly Panel

## Assembly Steps

- 1 Remove all Poly boards (A) from wrapping. Lay out each 1'x4' board parallel to each other face down. Spacing between each board is approximately  $\frac{5}{8}$ ". Spacing will be pre-determined by the hole placement in the Stringer Angle (B).
- 2 Place Stringer Angle (B) onto the deck boards (A), align the holes in the Stringer Angle with the pre-drilled holes on the Poly Boards. Each Stringer Angle is roughly  $11\frac{3}{4}$ " from the Poly Board edge.



- 3 Secure each Stringer Angle with M5x25mm Pan Head Screws (C).



### Optional Deck Lockers:

PN10867 - Deck Locker (4) Pack secures the 4'x4' Poly Panel onto the Patriot Dock frame by rotating the tab clockwise.

***\*Sold Separately\****

